

HUA BOX

HQT MODULE TP MODE INFORMATION

WWW.HUADONGLE.IR/HQT

Connect :

Phone should be in Powered Off state

Power Off Phone

Remove battery

Insert back

Insert USB cable and

PRESS and HOLD EDL CABLE BUTTON AND POWER ON PHONE

WAIT FOR SHOW LOGO

UNHOLD POWER ON PHONE

UNHOLD EDL CABLE BUTTON(after 2 sec)

install driver carefully

Drivers :

Download and install Drivers package from www.huadongle.ir/hqt

- WinUsbCoInstallers.msi
- WinUsbCompatIdInstaller.msi
- WinUsbDriversExt.msi
- EmergencyDownloadDriver.msi

YOU MUST INSTALL DRIVERS BEFORE START WORK HQT