

HUA BOX

HQT MODULE BASIC INFORMATION

WWW.HUADONGLE.IR/HQT

Connect :

Phone should be in Powered Off state

1. Power Off Phone
2. Remove battery
3. Insert back
4. PRESS and HOLD BOTH VOLUME KEYS
5. Insert USB cable

In some cases require use EDL cable or TEST POINT to force EDL mode!

Drivers :

Download and install Drivers package from www.huadongle.ir/hqt

- WinUsbCoInstallers.msi
- WinUsbCompatIdInstaller.msi
- WinUsbDriversExt.msi
- EmergencyDownloadDriver.msi

YOU MUST INSTALL DRIVERS BEFORE START WORK HQT