

HUA BOX

HQT MODULE NORMAL MODE INFO

WWW.HUADONGLE.IR/HQT

Connect :

Phone should be in Powered Off state

Power Off Phone

Remove battery

Insert back

PRESS and HOLD BOTH VOLUME KEYS

Insert USB cable

Drivers :

Download and install Drivers package from www.huadongle.ir/hqt

- WinUsbCoInstallers.msi
- WinUsbCompatIdInstaller.msi
- WinUsbDriversExt.msi
- EmergencyDownloadDriver.msi

YOU MUST INSTALL DRIVERS BEFORE START WORK HQT