

HUA BOX

HQT MODULE TP MODE INFORMATION

WWW.HUADONGLE.IR/HQT

Connect :

Phone should be in Powered Off state

Power Off Phone

Remove battery

Insert back(NO NEED FOR ALL PHONES)

Insert USB cable and

CONNECT TP POINT TO GND

INSERT USB CABLE TO PHONE

DISCONNECT TP AFTER SHOW DRIVER

install driver carefully

Drivers :

Download and install Drivers package from www.huadongle.ir/hqt

- WinUsbCoInstallers.msi
- WinUsbCompatIdInstaller.msi
- WinUsbDriversExt.msi
- EmergencyDownloadDriver.msi

YOU MUST INSTALL DRIVERS BEFORE START WORK HQT